


# HOME DECORATORS COLLECTION

BF-25067 NARROW OPEN BASE 36H×18W×24D

INV#13635









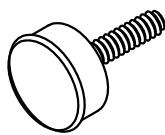



## ASSEMBLY INSTRUCTIONS

Made In China

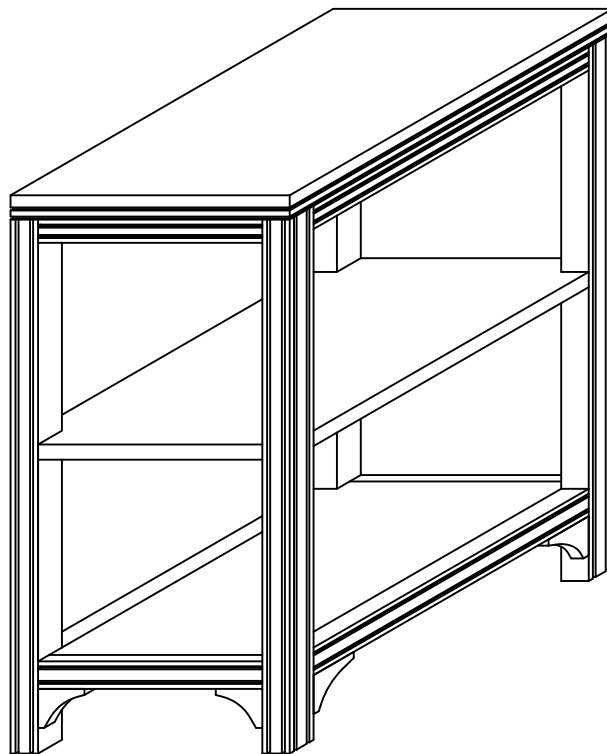

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

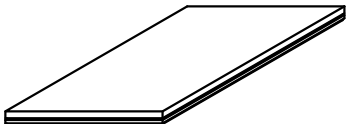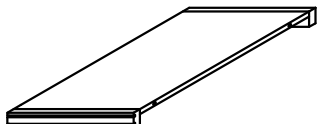PARTS LIST		
<b>A</b>  TOP PANEL-1PC	<b>B</b>  LEFT SIDE PANEL-1PC	<b>C</b>  RIGHT SIDE PANEL-1PC
<b>D</b>  ACROSS PANEL-1PC	<b>E</b>  BOTTOM PANEL-1PC	<b>F</b>  FRONT ADORNING PANEL-1PC
<b>G</b>  PANELS-2PCS	<b>H</b>  BACK ADORNING PANEL-1PC	<b>I</b>  FEET-4PCS
<b>J</b>  CAM-TOOL-1PC	<b>K</b> 8mm× 3/4"  SCREWS-4PCS	<b>L</b> 7mm× 7/8"  SCREWS-4PCS

M



GECKOS-4PCS

N



PLASTIC BELTS-2PCS


O

6mm× 3/4"




SCREWS-4PCS

P

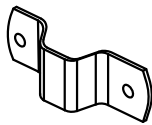


HOOKS-4PCS

Q

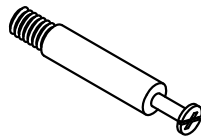

CAM-BOLTS-12PCS


R

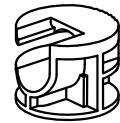

CAM-LOCKS-12PCS

S



8mm× 1-1/4"



SCREWS-6PCS




NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

**NOTE:** • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

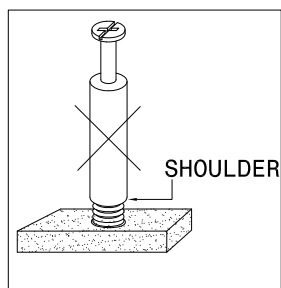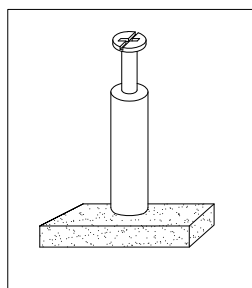


**NOTE:** TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

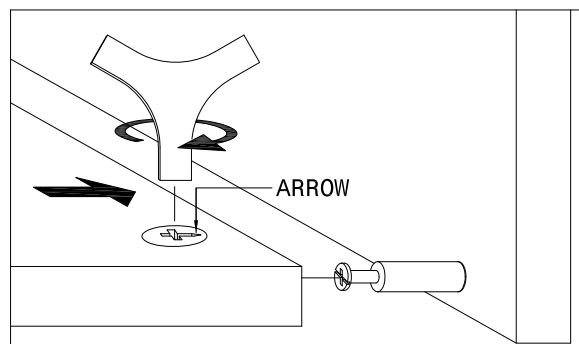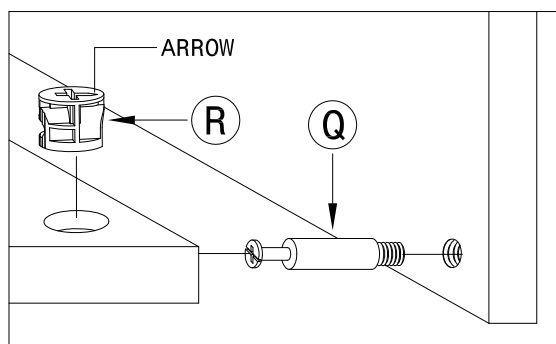


**NOTE:** • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

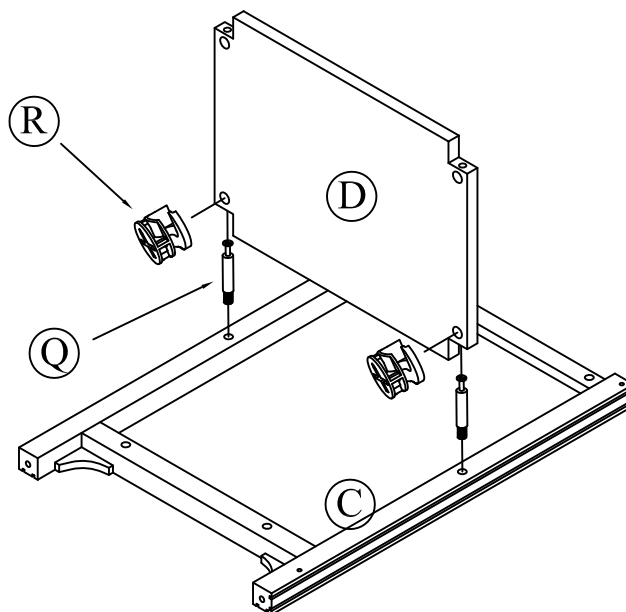


### 1) . ASSEMBLE THE ACROSS PANEL (D) .

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN RIGHT SIDE PANEL(C) .
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE ACROSS PANEL(D) AND ATTACH USING 2 CAM-LOCKS(R) .

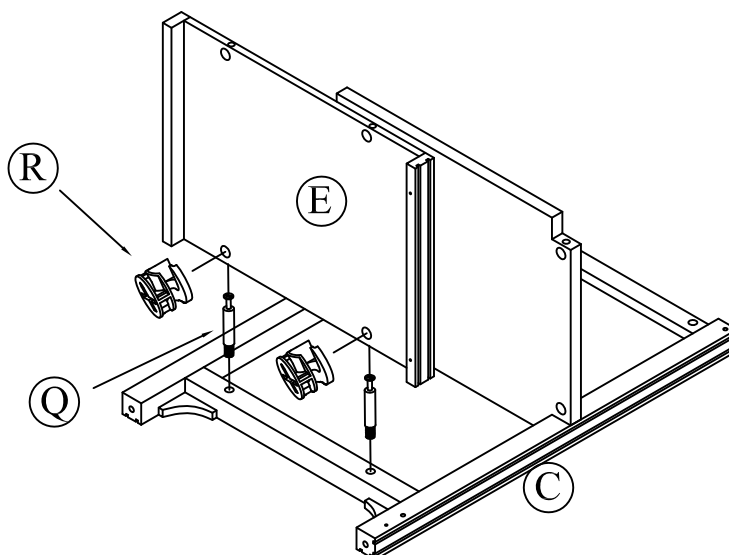


### 2) . ASSEMBLE THE BOTTOM PANEL (E) .

- ROTATE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE RIGHT SIDE PANEL(C) .
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE BOTTOM PANEL(E) AND ATTACH USING 2 CAM-LOCKS(R) .

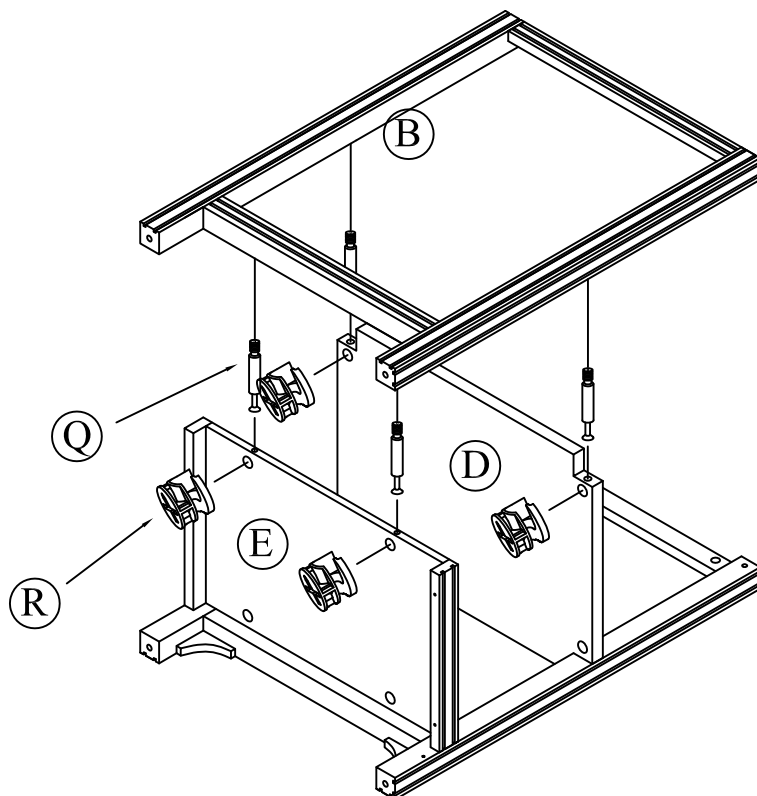


### 3) . ASSEMBLE THE SIDE PANEL (B) .

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE LEFT SIDE PANEL (B) .
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANELS (D/E) AND ATTACH USING 4 CAM-LOCKS (R) .

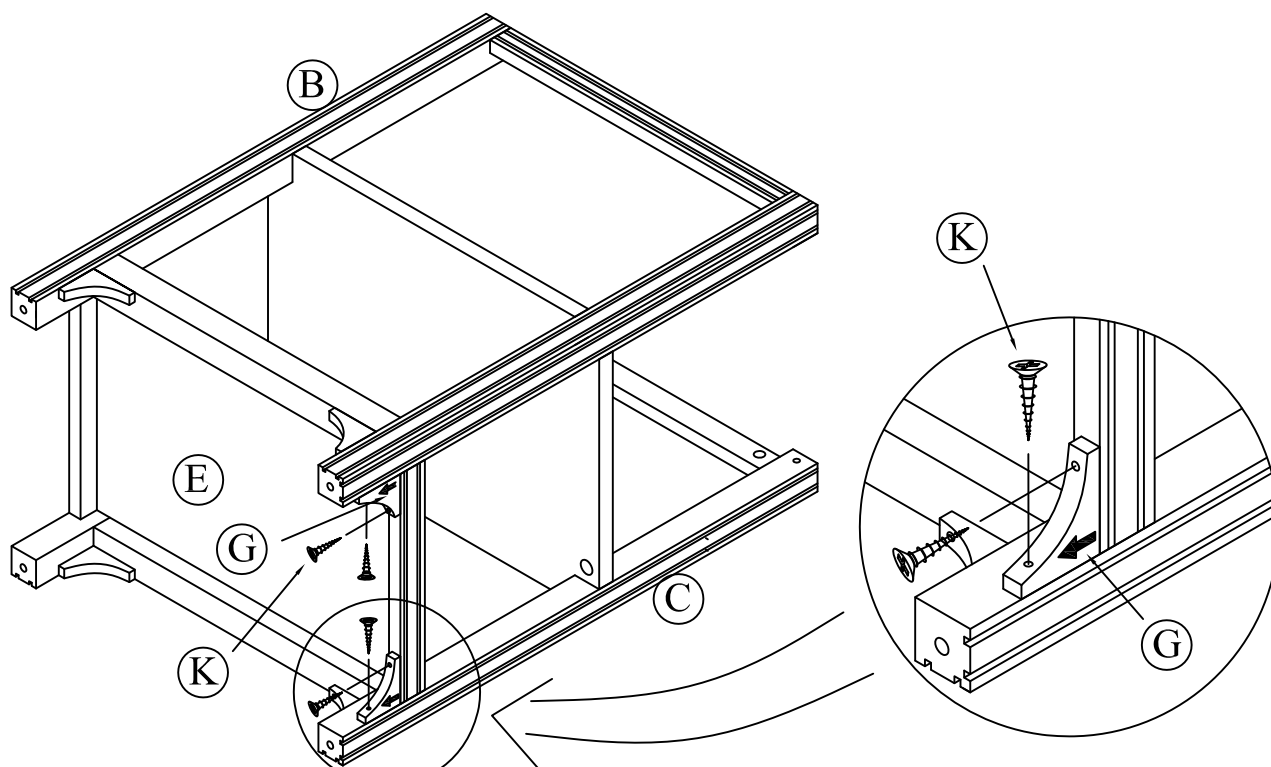


### 4) . ASSEMBLE THE PANEL (G) .

- ATTACH THE PANELS (G) TO PANELS (B/C/E) USING 4 SCREWS (K) .

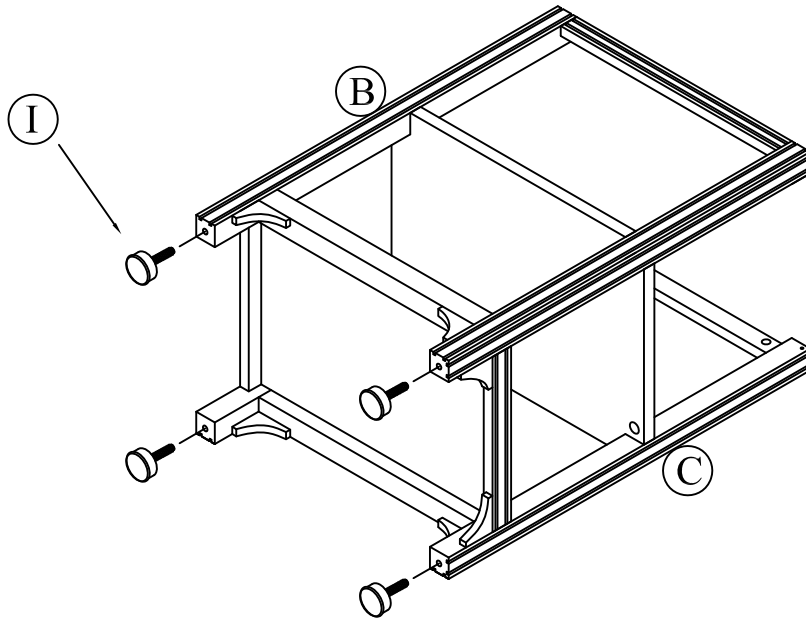


### 5) . ASSEMBLE THE FEET(I) .

- ROTATE THE FEET(I) INTO THE HOLES IN THE SIDE PANEL(B/C) .

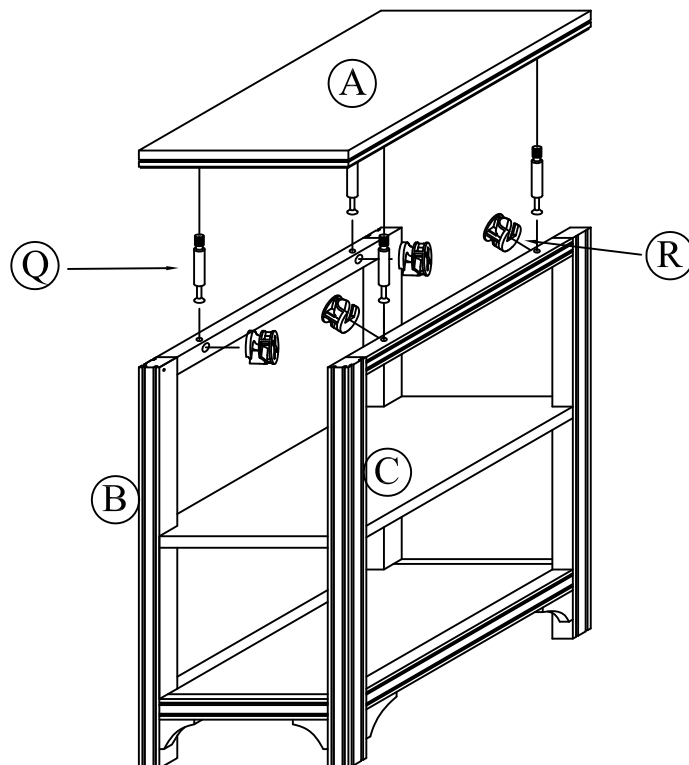


### 6) . ASSEMBLE THE TOP PANEL(A) .

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE TOP PANEL(A) .
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANELS(B/C) AND ATTACH USING 4 CAM-LOCKS(R) .

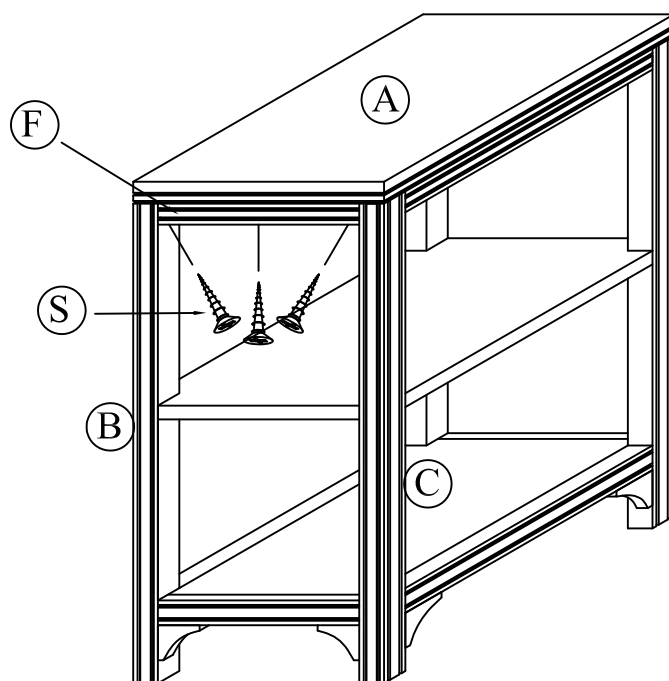

7) . ASSEMBLE THE PANEL (F) .

- ATTACH THE FRONT ADORNING PANEL (F) TO PANEL (A/B/C) USING 3 SCREWS (S) .

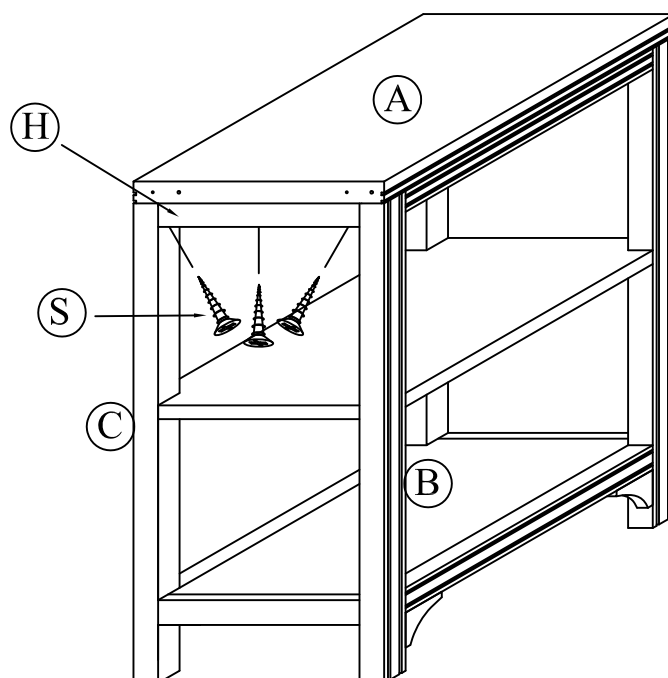


8) . ASSEMBLE THE PANEL (H) .

- ATTACH THE BACK ADORNING PANEL (H) TO PANEL (A/B/C) USING 3 SCREWS (S) .





## Warning

The anti-tip hardware must be used as part of assembly!

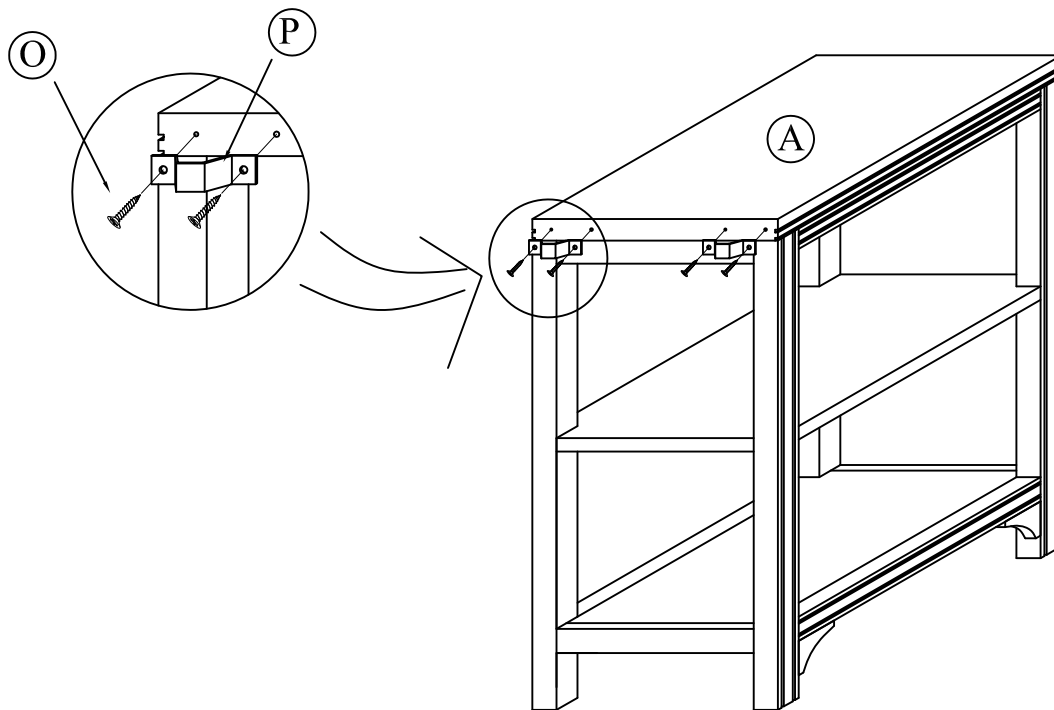

### 9) . ASSEMBLE THE PANEL(E).

- ATTACH 2 HOOKS(P) USING 4 SCREWS(O) IN THE PREDRILLED HOLES OF REAR TOP PANEL(A) .

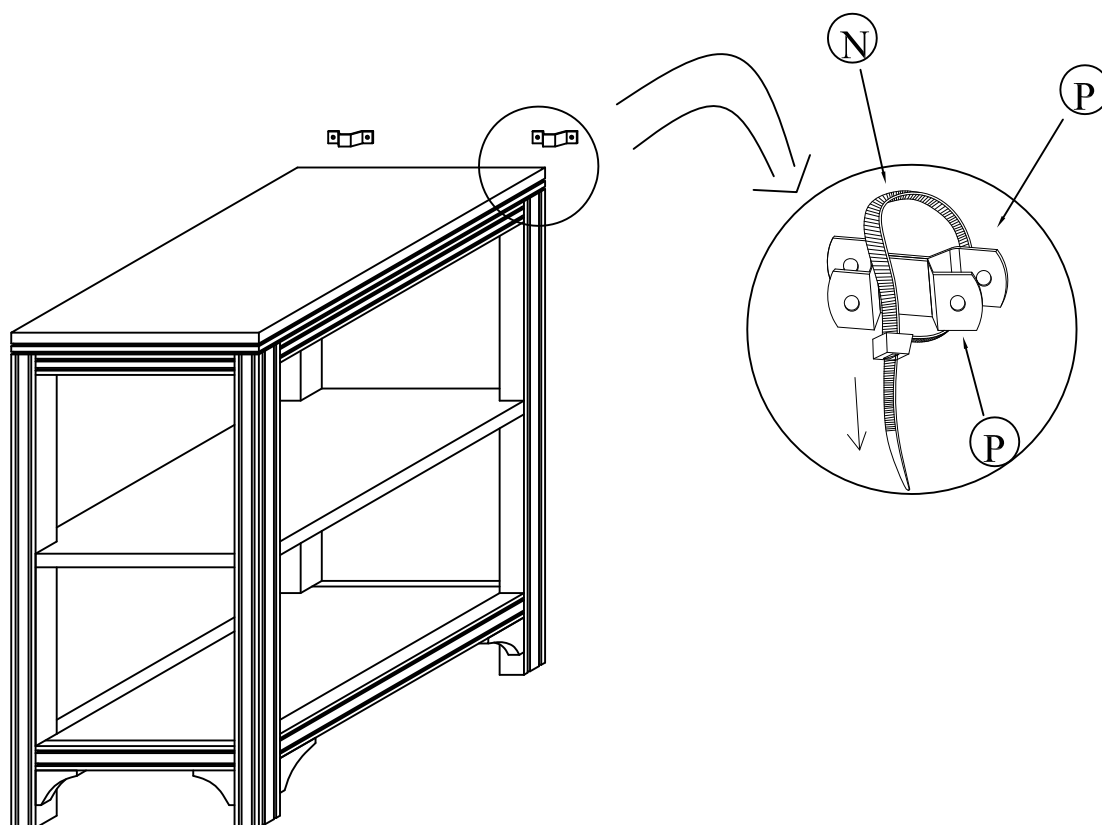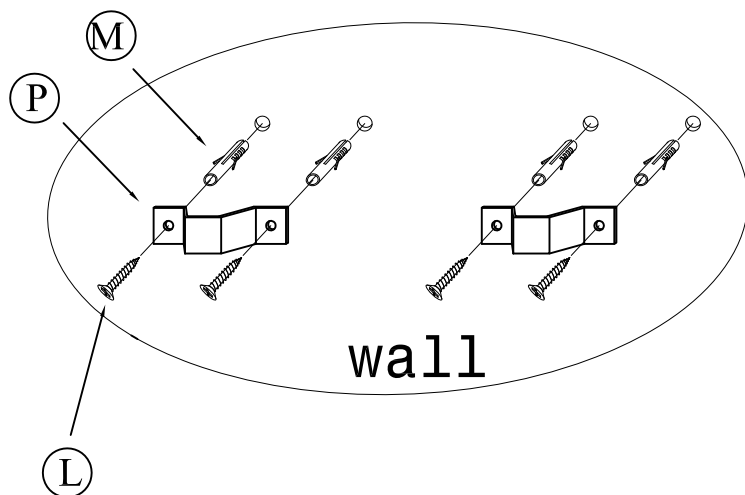

#### 10) . ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS(M) INTO HOLES IN THE WALL, AND ROTATE 4 SCREWS(L) INTO THE GECKOS(M) .
- CONNECT THE TWO HOOKS(P) WITH A PLASTIC BELT(N) .